

Remote control switch set – 3 receivers
Radiogestuurde schakelkit - 3 ontvangers
Jeu de prises secteur radiopilotées - 3 récepteurs
Juego con tomas de corriente teledirigidas
Drahtloser funkschalter-set



USER MANUAL	2
GEbruikersHANDLEIDING	4
NOTICE D'EMPLOI	6
MANUAL DEL USUARIO	8
BEDIENUNGSANLEITUNG	10
WARRANTY – GARANTIE – GARANTÍA	12





User manual

1. Introduction

To all residents of the European Union

Important environmental information about this product



This symbol on the device or the package indicates that disposal of the device after its lifecycle could harm the environment. Do not dispose of the unit (or batteries) as unsorted municipal waste; it should be taken to a

specialized company for recycling. This device should be returned to your distributor or to a local recycling service. Respect the local environmental rules.

If in doubt, contact your local waste disposal authorities.

Thank you for choosing Velleman! Please read the manual thoroughly before bringing this device into service. If the device was damaged in transit, don't install or use it and contact your dealer.

2. Safety Instructions

- For indoor use only. Do not expose the device to high temperature, sunlight or moisture.
- Do not exceed the maximum load current.
- Batteries (charged and used) may explode or leak if recharged or disposed of in fire.

3. Features

For features, go to www.velleman.eu and type **WRS4** in the search box. The features are listed on the product page that appears.

4. Overview

Refer to the illustrations on page 2 of this manual.

5. Installation

The package comes with one DC 12V 23A alkaline battery. Always use this type of battery. To insert the battery:

- Remove the battery lid.
- Insert the battery properly.
- Close the battery lid.

6. Operation

1. Insert a socket (for example socket 1) in a power outlet and connect any appliance, light or tool to the outlet.
2. On the remote control, to turn on the socket, press the ON button next to 1 (see illustration on page 2).
3. To turn off a socket, press the OFF button.

7. Technical Specifications

Power	max. 2300W / 10A
Voltage	230VAC/50Hz
Transmitter frequency	433,92 MHz
Transmitter power supply	1 x GP23A 12V battery (incl.)
Range	max. \pm 25m (without obstacles)

Use this device with original accessories only. Velleman nv cannot be held responsible in the event of damage or injury resulted from (incorrect) use of this device.

For more info concerning this product and the latest version of this manual, please visit our website www.velleman.eu. The information in this manual is subject to change without prior notice.